

Parcel scale KERN DE-D




The long lasting story of success with dust and spray protected display device



Piece counting



Animal weighing

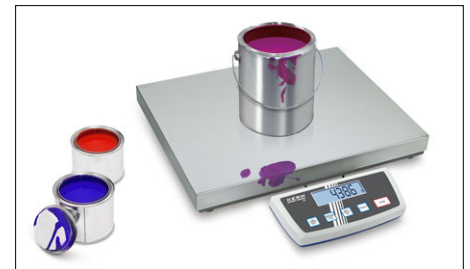

Recipe-weighing

Parcel scale KERN DE-D



Features

- High mobility: thanks to battery operation/ rechargeable battery operation (optional), compact, lightweight construction, it is suitable for the use in several locations (production, warehouse, dispatch department etc.)
- Display device flexible positioning e. g. free-standing or screwed to the wall
- **1** Display device: Plastics, protection against dust and water splashes IP65
- Weighing plate stainless steel, painted steel base
- PRE-TARE function for manual subtraction of a known container weight, useful for checking fill-levels
- With the recipe function you can weigh the different ingredients of a mixture. As a check, you can also call up the total weight of all the ingredients
- Freely programmable weighing unit, e.g. display direct in special units such as length of thread g/m, paper weight g/m², or similar

- Protective working cover included with delivery

Technical data

- Large backlit LCD display, digit height 25 mm
- Weighing plate dimensions, stainless steel W×D×H
 - A** 318×308×75 mm
 - B** 318×308×88 mm
 - C** 522×406×98 mm, see larger picture
 - D** 522×403×83 mm
 - E** 650×500×89 mm
- Dimensions of display device, W×D×H 225×110×45 mm
- Optional battery operation, 9 V block not included in scope of delivery, operating time up to 12 h
- Permissible ambient temperature 5 °C/35 °C

Accessories

- Protective working cover over the display device, scope of delivery: 5 items, KERN DE-A12S05
- Internal rechargeable battery pack, operating time up to 30 h without backlight, charging time approx. 10 h, KERN NDE-A02
- Mount to fasten the display device to the platform, for models with weighing plate size **B**, **C**, can be reordered, KERN DE-A11N
- Wall mount for display device, KERN DE-A13
- **2** Stand to elevate display device, height of stand approx. 480 mm, can be reordered, KERN DE-A10
- Individual header data: the free software SHM-01 can be used to print header lines on the printout when using printers YKN-01 and YKB-01N
- Further details, plenty of further accessories and suitable printers see *Accessories*

STANDARD



OPTION



Model	Weighing capacity [Max] kg	Readability [d] g	Reproducibility g	Linearity g	Smallest part weight [Normal] g/piece	Cable length approx. m	Net weight approx. kg	Weighing plate	Option	
									DAkkS	Calibr. Certificate
Dual-range balance switches automatically to the next largest weighing capacity [Max] and readability [d]										
DE 6K1D	3 6	1 2	1 2	± 3 6	40	1,4	4,8	A	963-128	
DE 15K2D	6 15	2 5	2 5	± 6 15	100	1,4	4,8	A	963-128	
DE 35K5D	15 35	5 10	5 10	± 15 30	100	1,4	4,8	A	963-128	
DE 35K5DL	15 35	5 10	5 10	± 15 30	100	1,4	16	D	963-128	
DE 60K10D	30 60	10 20	10 20	± 30 60	200	1,4	4,8	A	963-129	
DE 60K10DL	30 60	10 20	10 20	± 30 60	200	1,4	16	D	963-129	
DE 150K20D	60 150	20 50	20 50	± 60 150	400	1,5	5	A	963-129	
DE 150K20DL	60 150	20 50	20 50	± 60 150	400	1,5	16	D	963-129	
DE 150K20DXL	60 150	20 50	20 50	± 60 150	400	1,4	28	E	963-129	
DE 300K50D	150 300	50 100	50 100	± 150 300	2000	1,25	16	D	963-129	
DE 300K50DL	150 300	50 100	50 100	± 150 300	2000	1,05	28	E	963-129	
Dual-range balance with high resolution readability										
DE 6K0.5A	6	0,5	0,5	± 1,5	10	1,4	4,8	A	963-128	
DE 12K1A	12	1	1	± 3	20	1,4	4,8	A	963-128	
DE 24K2A	24	2	2	± 6	40	1,4	4,8	A	963-128	
DE 60K5A	60	5	5	± 15	100	1,4	4,8	A	963-129	
DE 120K10A	120	10	10	± 30	200	1,4	5,0	A	963-129	
Dual-range balance with high resolution readability										
DE 15K0.2D	6 15	0,2 0,5	0,2 0,5	± 0,8 2	4	1	4	B	963-128	
DE 35K0.5D	15 35	0,5 1	0,5 1	± 2 4	10	1	7	B	963-128	
DE 60K1D	30 60	1 2	1 2	± 4 8	20	1,47	7	B	963-129	
DE 60K1DL	30 60	1 2	1 2	± 4 8	20	1,4	15	C	963-129	
DE 150K2D	60 150	2 5	2 5	± 8 20	40	1,6	7	B	963-129	
DE 150K2DL	60 150	2 5	2 5	± 8 20	40	1,4	15	C	963-129	
DE 300K5DL	150 300	5 10	5 10	± 20 40	100	1,4	15	C	963-129	

Pictograms

<p> Internal adjusting: Quick setting up of the balance's accuracy with internal adjusting weight (motordriven)</p> <p> Adjusting program CAL: For quick setting up of the balance's accuracy. External adjusting weight required</p> <p> Easy Touch: Suitable for the connection, data transmission and control through PC, tablet or smartphone.</p> <p> Memory: Balance memory capacity, e.g. for article data, weighing data, tare weights, PLU etc.</p> <p> Alibi memory: Secure, electronic archiving of weighing results, complying with the 2014/31/EU standard</p> <p> Data interface RS-232: To connect the balance to a printer, PC or network</p> <p> RS-485 data interface: To connect the balance to a printer, PC or other peripherals. Suitable for data transfer over large distances. Network in bus topology is possible</p> <p> USB data interface: To connect the balance to a printer, PC or other peripherals</p> <p> Bluetooth* data interface: To transfer data from the balance to a printer, PC or other peripherals</p> <p> WiFi data interface: To transfer data from the balance to a printer, PC or other peripherals</p> <p> Control outputs (optocoupler, digital I/O): To connect relays, signal lamps, valves, etc.</p> <p> Analogue interface: to connect a suitable peripheral device for analogue processing of the measurements</p> <p> Interface for second balance: For direct connection of a second balance</p> <p> Network interface: For connecting the scale to an Ethernet network</p>	<p> KERN Communication Protocol (KCP): It is a standardized interface command set for KERN balances and other instruments, which allows retrieving and controlling all relevant parameters and functions of the device. KERN devices featuring KCP are thus easily integrated with computers, industrial controllers and other digital systems</p> <p> GLP/ISO log: The balance displays serial number, user ID, weight, date and time, regardless of a printer connection</p> <p> GLP/ISO log: With weight, date and time. Only with KERN printers</p> <p> Piece counting: Reference quantities selectable. Display can be switched from piece to weight</p> <p> Recipe level A: The weights of the recipe ingredients can be added together and the total weight of the recipe can be printed out</p> <p> Recipe level B: Internal memory for complete recipes with name and target value of the recipe ingredients. User guidance through display</p> <p> Totalising level A: The weights of similar items can be added together and the total can be printed out</p> <p> Percentage determination: Determining the deviation in % from the target value (100 %)</p> <p> Weighing units: Can be switched to e.g. nonmetric units at the touch of a key. See balance model. Please refer to KERN's website for more details</p> <p> Weighing with tolerance range: (Checkweighing) Upper and lower limiting can be programmed individually, e.g. for sorting and dosing. The process is supported by an audible or visual signal, see the relevant model</p> <p> Hold function: (Animal weighing program) When the weighing conditions are unstable, a stable weight is calculated as an average value</p> <p> Protection against dust and water splashes IPxx: The type of protection is shown in the pictogram</p>	<p> Suspended weighing: Load support with hook on the underside of the balance</p> <p> Battery operation: Ready for battery operation. The battery type is specified for each device</p> <p> Rechargeable battery pack: Rechargeable set</p> <p> Universal mains adapter: with universal input and optional input socket adapters for A) EU, CH, GB; B) EU, CH, GB, USA; C) EU, CH, GB, USA, AUS</p> <p> Mains adapter: 230V/50Hz in standard version for EU, CH. On request GB, USA or AUS version available</p> <p> Power supply: Integrated in balance. 230V/50Hz standard EU. More standards e.g. GB, USA or AUS on request</p> <p> Weighing principle: Strain gauges: Electrical resistor on an elastic deforming body</p> <p> Weighing principle: Tuning fork: A resonating body is electromagnetically excited, causing it to oscillate</p> <p> Weighing principle: Electromagnetic force compensation: Coil inside a permanent magnet. For the most accurate weighings</p> <p> Weighing principle: Single cell technology: Advanced version of the force compensation principle with the highest level of precision</p> <p> Verification possible: The time required for verification is specified in the pictogram</p> <p> DAKkS calibration possible (DKD): The time required for DAKkS calibration is shown in days in the pictogram</p> <p> Factory calibration (ISO): The time required for Factory calibration is shown in days in the pictogram</p> <p> Package shipment: The time required for internal shipping preparations is shown in days in the pictogram</p> <p> Pallet shipment: The time required for internal shipping preparations is shown in days in the pictogram</p>
---	--	--

*The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by KERN & SOHN GmbH is under license. Other trademarks and trade names are those of their respective owners.

KERN – Precision is our business

To ensure the high precision of your balance KERN offers you the the appropriate test weight in the international OIML error limit classes E1-M3 from 1 mg - 2500 kg. In combination with a DAKkS calibration certificate the best pre-requisite for proper balance calibration.

The KERN DAKkS calibration laboratory today is one of the most modern and best-equipped DAKkS calibration laboratories for balances, test weights and force-measurement in Europe.

Thanks to the high level of automation, we can carry out DAKkS calibration of balances, test weights and force-measuring devices 24 hours a day, 7 days a week.

Range of services:

- DAKkS calibration of balances with a maximum load of up to 50 t
- DAKkS calibration of weights in the range of 1 mg - 2500 kg
- Volume determination and measuring of magnetic susceptibility (magnetic characteristics) for test weights
- Database supported management of checking equipment and reminder service
- Calibration of force-measuring devices
- DAKkS calibration certificates in the following languages DE, EN, FR, IT, ES, NL, PL
- Conformity evaluation and reverification of balances and test weights

Your KERN specialist dealer: