

MEDISTEEL
Wall-mounted ashtray

PP0104CS
Satin finish
General Description

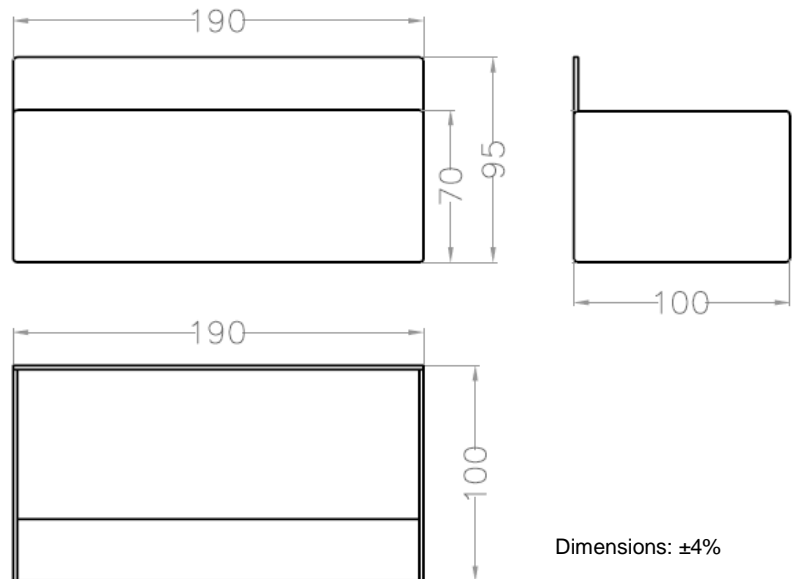
- Wall-mounted ashtray with swing cover made of stainless steel AISI 304, 1,2 mm thick, satin finish
- The stainless steel AISI 304 protects the product against rust and ensures quality and longevity.
- Model suitable for public use.
- Manually operated

Components & materials

- **BODY:** made of stainless steel AISI 304, 1,2 mm thick, satin finish. It is fixed to the wall by means of 3 screws.
- **ASH RECEPTACLE:** made of stainless steel AISI 304, 0,8 mm thick. It is manually removed from inside the body.
- **SWING COVER:** made of stainless steel AISI 304, 1,2 mm thick, satin finish. It swivels by means of a stainless steel spring-tensioned piano hinge to dump ashes into the ash receptacle and it returns to original position after release

Technical Specifications

Body and swing cover thickness	<i>1,2 mm</i>
Ash receptacle thickness	<i>0,8 mm</i>
Net weight	<i>1,26 Kg</i>

Dimensions


Dimensions: ±4%

MOUNTING

Fix the ashtray on the wall using stainless steel screws through the corresponding holes of the ashtray back plate.

OPERATION

Press the swing cover to dump butts and ashes into the ash receptacle. Clean out cycle is determined by maintenance needs.