

INDIVIDUAL USE
Push-Button

SC0020
white finish

SC0020CS
black finish

General description

- Exclusive hotel bathroom wall mounting hair dryer with a functional, robust and trendy design that blends into any space perfectly such as hotels, hospitals and elderly care centers.
- This powerful and long-lasting hair dryer is push-button activated and has a total power of 1,240W.
- Two heat/speed settings moving the push-button up and down. Position “1” for hot heating and position “2” for warm heating.

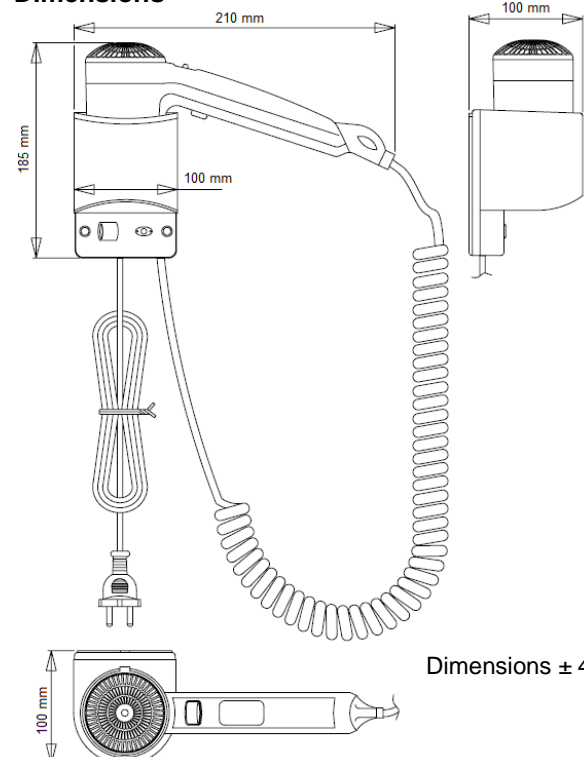
Components & materials

- **SC0020**: plastic ABS, white finish.
- **SC0020CS**: plastic ABS, black finish.
- White or black ABS plastic wall support.
- 11,000-13,000 rpm motor that includes a thermal overload switch.
- 1,200W heating element that includes a safety thermal cut-out.
- Speed selector with two settings (hot heating and warm heating).
- Heavy-duty 650-1,800mm coiled power cord.
- Plug with 1,000mm power cord.
- Turbine made in polycarbonate plastic.

Technical Specifications

Voltage	220- 240 V
Frequency	50/60 Hz
Electrical Isolation	Class II
Total power	540-1,240 W
Consumption	2.7 – 4.9 A
Motor power	40 W
Rpm	11,000-13,000
Heating element power	1,200 W
Dimensions	210 x185 x 100 mm
Weight	0,7 Kg
Effective airflow	73 m3/h (1,217 L/min)
Air velocity	54 Km/h
Air temperature (10 cm distance/21°C)	61°C
Sound pressure (*) (at 2m)	60 dBA

(*) According to UNE EN ISO 11201:2010 V2 standard.

Dimensions


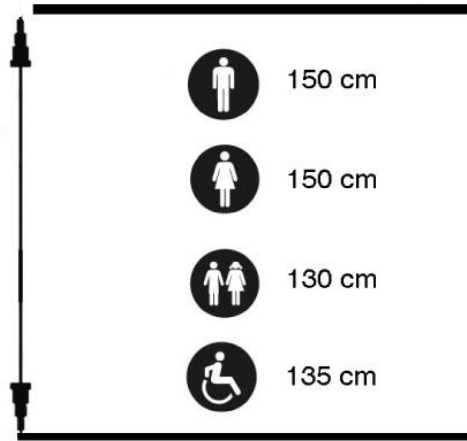
Dimensions ± 4%

Operation

Switch on general power and pick up the dryer body. Press the bottom on the handle for its working. Select the speed and direct the dryer to the hair at your own convenience. Once you are finish, hang the dryer body in the wall support and switch to the OFF position.

Mounting

Recommended heights distance from the floor



Certificates & Qualifications



Mediclinics, S.A., reserves the right to make changes and/or modifications to the products and their specifications without prior notice.
Revision 09-15 © mediclinics S.A.

