

MULTIPLE SINK BATHROOM COUNTERTOP

Wall mounted



SN0300CS
Satin finish



SN0200CS
Satin finish

General Description

- Wall mounted double/triple bathroom countertop with two/three round stamped bowls, all made of stainless steel AISI 304, 1.5 mm thick, satin finish.
- The stainless steel construction protects the product against rust and ensures quality and longevity.
- Engineered to combine an attractive look and a great robustness with a high versatility.
- A contoured exterior and interior to facilitate cleaning.
- Model suitable for public use with high strength and durability.
- Screws for wall mounting, taps and flexible hoses are not supplied.





Materials & components

- **SN0300CS:** wall mounted triple bathroom countertop with three round stamped bowls, made of stainless steel AISI 304, 1.5 mm thick, satin finish.
- **SN0200CS:** wall mounted double bathroom countertop with two round stamped bowls, made of stainless steel AISI 304, 1.5 mm thick, satin finish.
- **COUNTERTOP:** made of stainless steel AISI 304, 1.5 mm thick. It includes 2 (SN0200CS) or 3 (SN0300CS) tap holes $\varnothing 22$ mm.
- **BOWLS:** made of stainless steel AISI 304, 1.5 mm thick, stamped in the same countertop and with a $\varnothing 360$ mm.

Technical specifications

Countertop and bowl thickness	1,5 mm
Outlet	1 ½"
Bowl diameter	$\varnothing 360$ mm
Weight (empty)	22.1 Kg (SN0300CS) 15.5 Kg (SN0200CS)

Dimensions

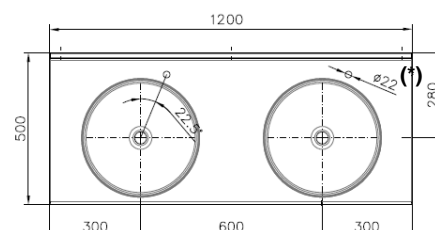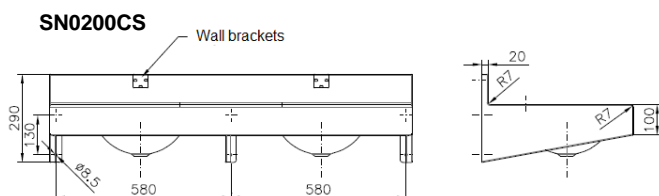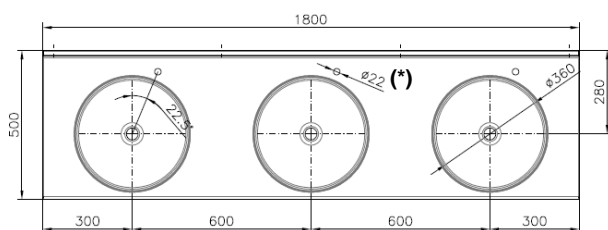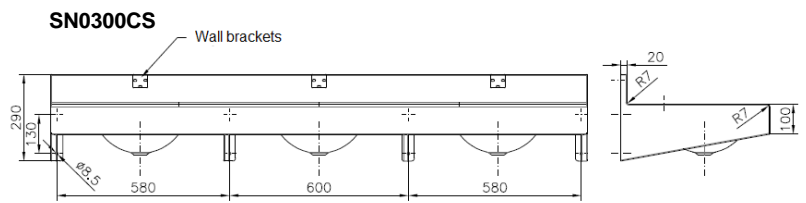

Dimensions $\pm 4\%$

(*) Drills for the faucet must be made by the installer.
Suggested dimensions

MOUNTING

- 1st. fix each wall bracket to the wall with 3 plugs and 3 screws (not supplied)
- 2nd. hang the bathroom countertop to the wall brackets
- 3rd. fix the bathroom countertop to the wall by means of screws.

