

MULTI-PURPOSE CABINETS

RECESSED

Paper towel dispenser + waste bin



DTE0050CS Satin finish

General description

- Multi-purpose cabinet with paper towel dispenser and removable waste bin, to recess into the wall, made of stainless steel AISI 304, 0.8 mm thick.
- Suitable for public toilets of high frequency. This model has been specially designed to save space and to have several integrated solutions at the same time.
- With a modern design and manufactured with resistant materials this multi-purpose unit becomes the best solution for sites seeking to innovate.


Components and materials

- BODY: made of AISI 304 stainless steel, 0.8 mm thick, satin finish in all its visible parts.
- DOOR: double panel, warp resistant with full-length piano hinge and tumbler lock keyed and made of stainless Steel, 1.2 mm thick.
- PAPER TOWEL DISPENSER: made of AISI 304 stainless Steel. It can hold between 600 and 800 paper towels C or Z. The towel tray opening has bound edges to minimize tearing of paper towels. It also has a front closure with special key supplied.
- INNER CONTAINER: removable and made of AISI 304 stainless steel, 0.8 mm thick and has a capacity of 12.7 L.

Technical specifications

Dimensions	330 W x 1,400 H x 103 D
Wall opening	290W x 1,365 H x 95 D
Door thickness	1.2 mm
Body, inner container and	0.8 mm
paper tray thickness	
Weight (empty)	12.6 Kg
Paper dispenser capacity	600-800 u.
Towel size	Max. 100x260 mm
Bin Capacity	12.5 L

Dimensions

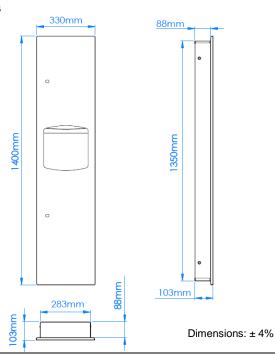


OPERATION

Pull the towel until it detaches from the appliance. Place the waste straight into the waste receptacle. Place hands under the air outlet grill. The dryer will start automatically. Repeat the action, at your own convenience.

MOUNTING

Rough wall opening required is 290mm (W) x 1,365mm (H) x 95 mm (D). Secure with stainless steel screws at points indicated by an S in the following figure:

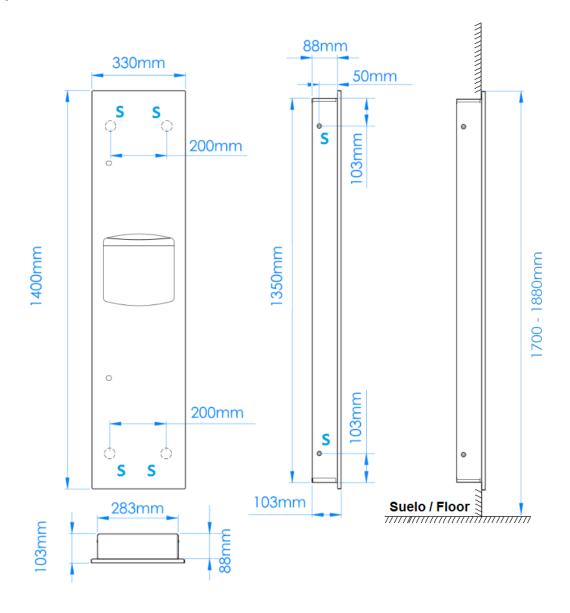

Mediclinics, S.A., reserves the right to make changes and/or modifications to the products and their specifications without prior notice.

Review 12-18

© mediclinics S.A.

