

SOAP DISPENSERS

RECESSED Push-button



DJT118 Bright finish

General description

- Countertop-mounted soap dispenser shall dispense 950ml.
- · Push-button actuated.
- Model suitable for collectivities and for installation in areas with high traffic of people.
- Dispenses liquid soap or hand sanitizing gels.
- It is recommended to use liquid soap or hand sanitizing gel with the following characteristics:
 - Maximum alcohol content of 80%
 - Density between 0.9 and 1.35 kg/dm³
 - Viscosity between 500 and 2,500 cps.

It does not support soaps that contain methanol, chlorine or solid or abrasive particles.


Components and materials

- DISPENSER STEM & 102 MM SPOUT: chrome-plated brass, bright finish, with rubber "duck bill" check valves and an O-ring seal. Vandal-resistant spout shall rotate 360° without damage to unit. Valve operation shall comply with ADA Accessibility (no more than 22.2 Newtons of pressure to actuate without grasping or twisting by operator).
- TANK: shall be translucent, shatter-resistant polyethylene, refillable from the top
- THREADED SHANK: shall be gray thermoplastic ABS, shatter-resistant.
- ESCUTCHEON: made of chrome-plated brass, bright finish.
- VALVE BODY, INTERNAL PARTS, BASIN NUT AND TANK ADAPTER: modeled plastic.
- SPRING, ESCUTCHEON WASHER, STEM RETAINER COLLAR AND SCREW: made of stainless steel.

Technical Specifications

| Weight (empty) | 0,425 Kg |
|-----------------------------|----------|
| Pressure pulsation | 20,0 N |
| Capacity | 0,95 L |
| Quantity dispensed per pump | 1 ml |
| Escutcheon | Ø50 mm |
| Countertop hole | Ø25 mm |
| Tank height | 216 mm |

Dimensions

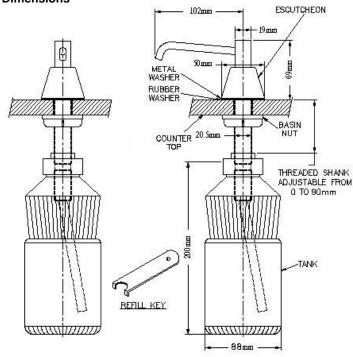

Dimensions ±4%

MOUNTING TEMPLATE

Countertop recessed, according to dimensions showed in the previous sketch.

Unit is typically located adjacent to a flush mounted lavatory, through \emptyset 22-25 mm cut out (by others) in counter top. An adjustable threaded shank allows for installation in counter tops up to 90mm high.

Mediclinics, S.A., reserves the right to make changes and/or modifications to the products and their specifications without prior notice Review 09-20 © mediclinics S.A.

