

STANDARD

2 paper rolls



PR2784
White epoxy finish



PR2784B
Black epoxy finish



PR2784C
Bright finish



PR2784CS
Satin finish

General Description

- Toilet paper dispenser for two standard rolls, surface mounted.
- Suitable design for easy integration in the washroom and compatible with the line of washroom accessories Mediclinics®.
- Manual dispensing.
- One-piece body.
- Suitable for high traffic facilities and for public use.
- High strength, durability and anti vandalism model.


Components & materials

- **PR2784:** steel, white Epoxy finish.
- **PR2784C:** stainless steel AISI 304, bright finish.
- **PR2784CS:** stainless steel AISI 304, satin finish.
- **PR2784B:** steel, black Epoxy finish.
- One-piece body, 0.8 mm thick with burr-free edges.
- One-piece lid, 0.8 mm thick, weld-free, fixed to the body by means of two rivets that allows swinging down of the lid for the replenishment.
- Back-plate 0.8 mm thick with slots for easy installation.
- Two slots in both sides that indicates the content level.
- Plastic holder for spare roll can be regulated in two different positions, depending on the size of the paper roll and allowing free movement of the roll in use. The toilet paper descends when the previous one has been finished by simply putting the hand through the side slot.
- Lock with standard Mediclinics® key.

Technical Specifications

Dimensions	296 x 120x 152mm
Paper roll capacity	Max. Ø 130 mm
Thickness of body and lid	0,8 mm
Weight (empty)	1,1 kg
Toilet roll width	Max. 110 mm
Toilet paper roll capacity	2

Dimensions

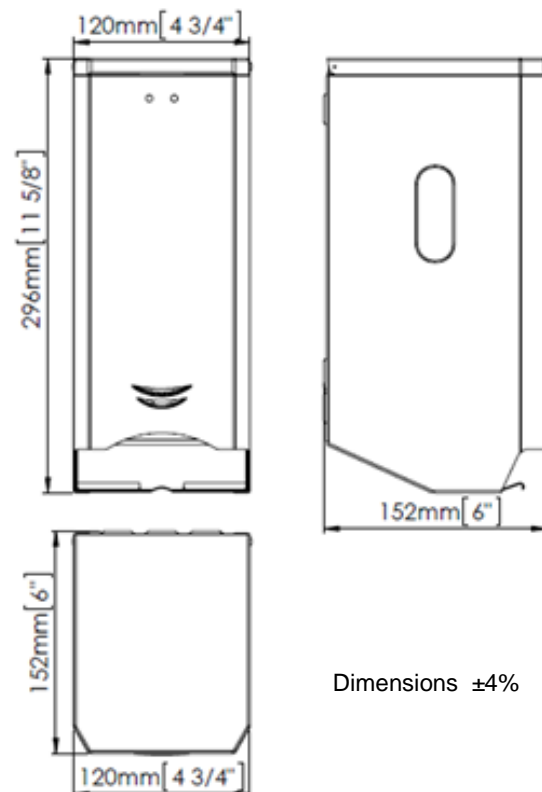

Dimensions ±4%

MOUNTING TEMPLATE

65-75 cm at lower point // 70 cm at lower point (for handicapped people).